



1. Unpack the luminaire.




2. Connect the 3 core cable to the power supply (Class I.).

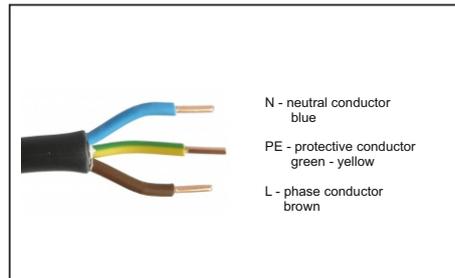


3. Connect the 5 core cable to the power supply (Class I.).

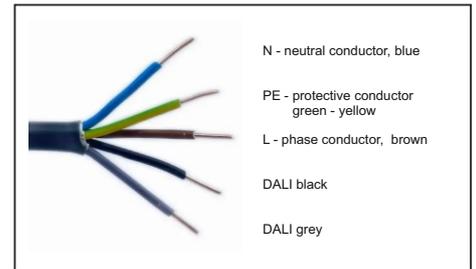


4. Connect the 2 core cable to the power supply (Class II.).

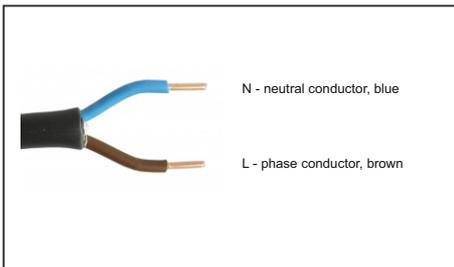


5. Connect the 3 pin connector Gesis to the power supply (Class I.).

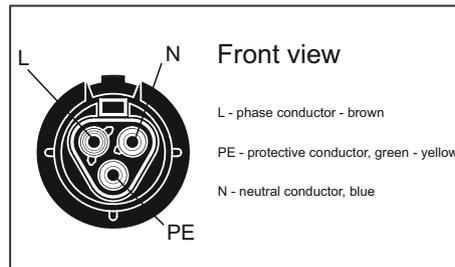


6. Connect the 5 pin connector Gesis to the power supply (Class I.).

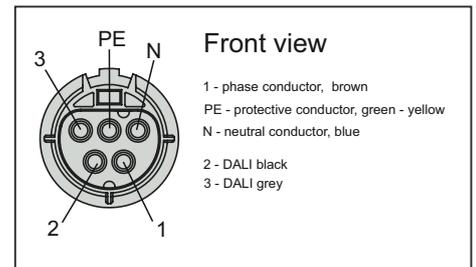


7. Connect the 2 pin connector Gesis to the power supply (Class II.).

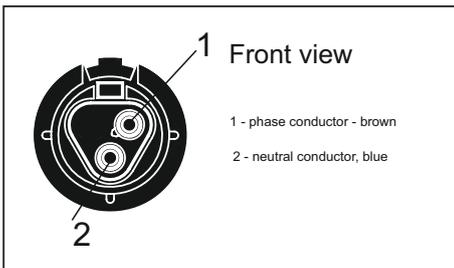

8. For installation in outdoor spaces, the luminaire must be provided with a cover


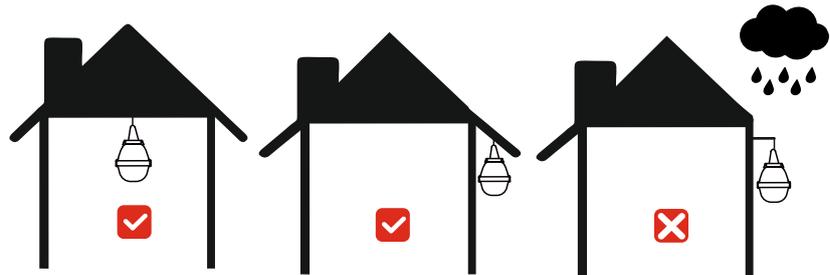


9. The luminaire can be installed using the fixing brackets:

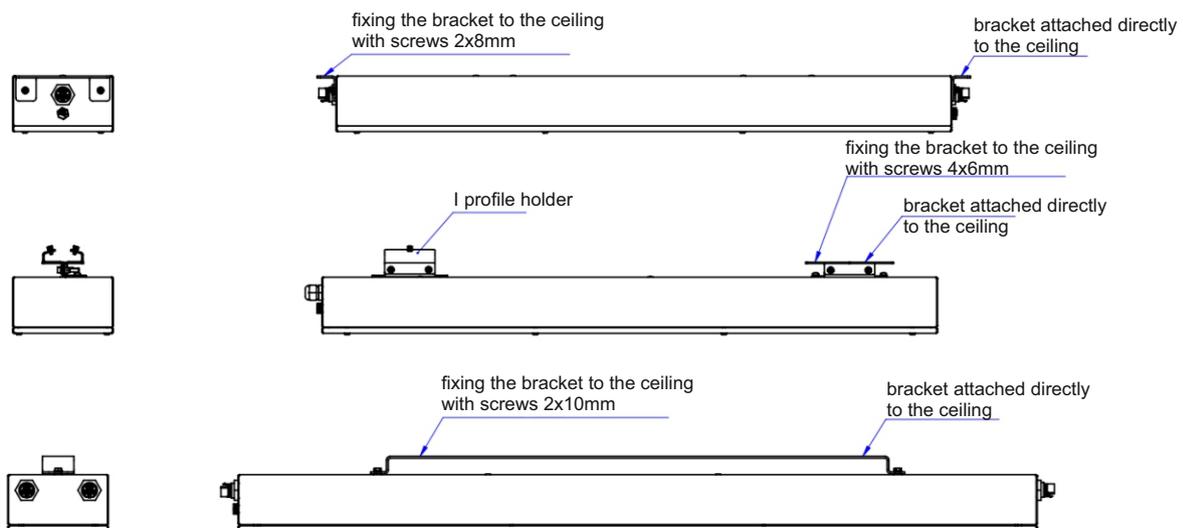



	L (mm)
PERON 3	980
PERON 4	1272

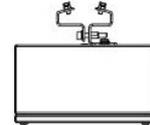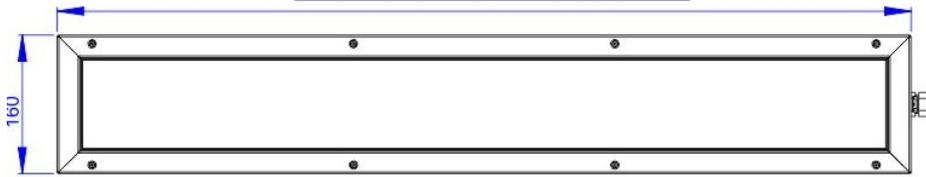

PERON 3 = 6 kg



PERON 4 = 8 kg

Recommended installation height up to 3- 8 meters.

- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

- The light sources in this luminaire is only replaceable by the manufacturer or their technicians or a qualified person.

- **Caution, risk of electric shock**



- Do not look directly or with optical aids into the light source RG1 $d > 0,5$ m



- This luminaire operates at mains voltage 220-240V, 50-60 Hz.

- Any modification to this luminaire is forbidden.

Cleaning:

clean the luminaire with the standard detergents. DO NOT use any abrasive detergents or solvents.

Installation and maintenance:

can provide only a person with an electrical qualification.

ELEKTRO-LUMEN, s. r. o.

Hranická 505
753 61 Hranice IV - Drahotuše
Česká republika

Telefon: +420 581 699 411

Fax: +420 581 699 419

E-mail: el-lumen@el-lumen.cz

Web: www.el-lumen.cz



The company reserves the right to change technical data and printing errors.

Copyright © ELEKTRO-LUMEN, s. r. o.